


SPARE PARTS DRAWING AND LIST

Spare parts are available from the European Spare Parts Centre in Brussels:

Spare parts drawing PN540:

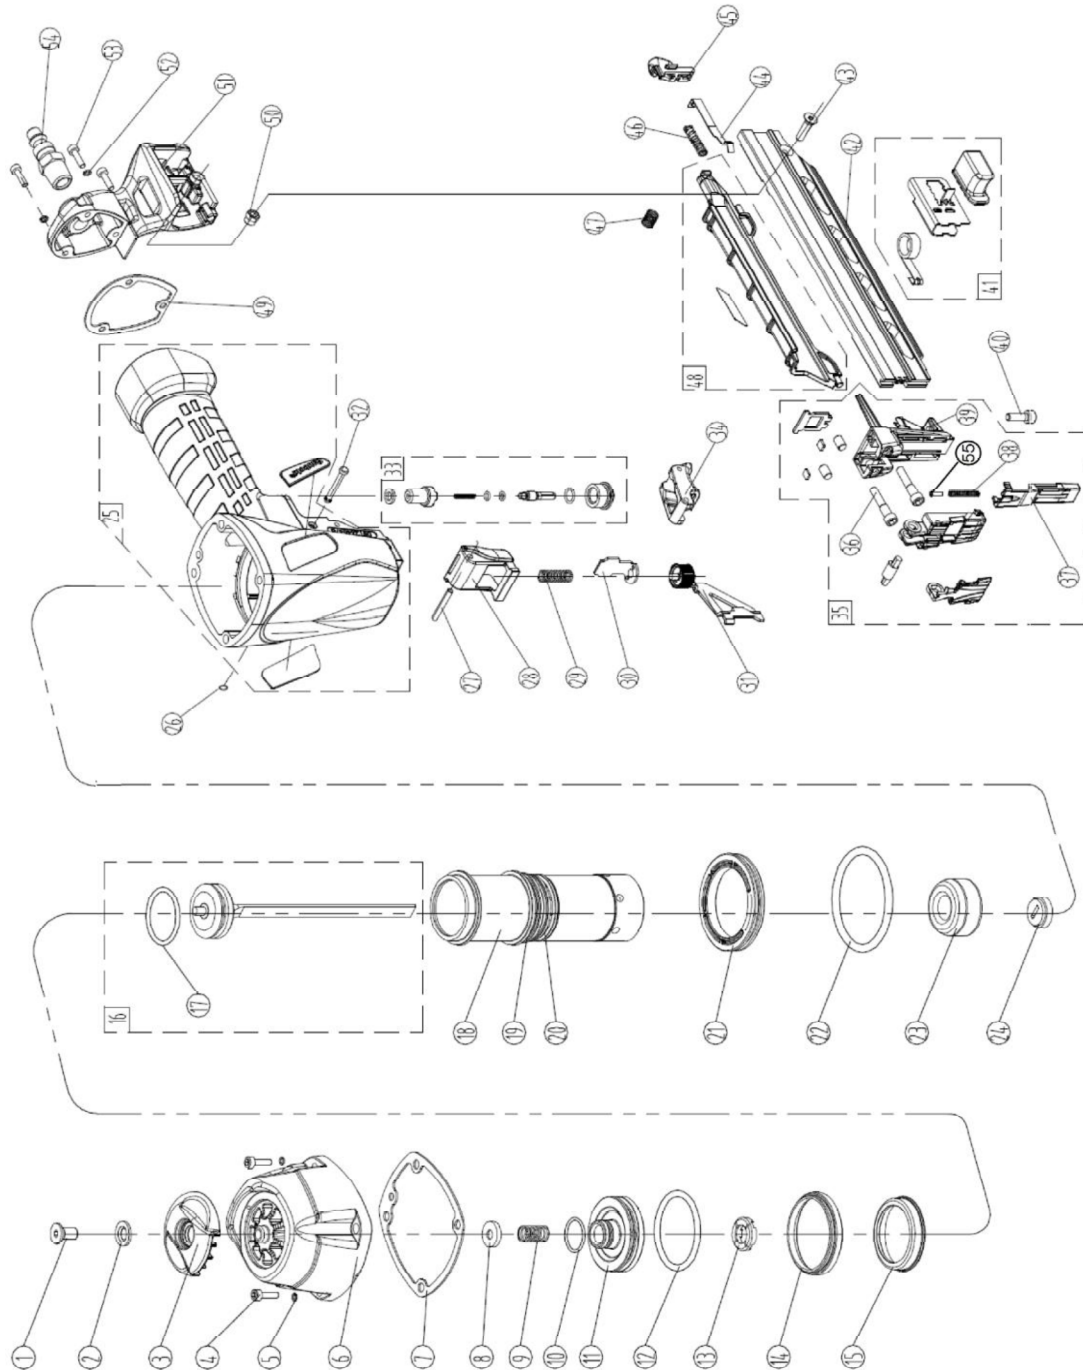

Plan Number	Eurocode	Description
001	617539	SCREW
002	617558	BUSHING
003	617504	EXHAUST COVER
004	617533	SCREW
005	617535	WASHER
006	576142	CYLINDER CAP
007	617550	GASKET
008	617548	SEAL
009	617519	SPRING
010	617521	O-RING
011	617510	VALVE
012	617527	O-RING
013	617507	PISTON STOP
014	617552	RESTRICT WASHER
015	617551	CYLINDER SEAL
016	576143	PISTON UNIT
017	617523	O-RING
018	617505	CYLINDER
019	617524	O-RING
020	617525	O-RING
021	617503	COLLAR
022	617522	O-RING
023	617506	BUMPER
024	576145	JOINT GUIDE
025	576146	BODY UNIT
026	617526	O-RING
027	617537	SPRING PIN
028	617553	SAFETY BRACKET
029	576147	SPRING
030	617498	SAFETY BRAKET A
031	576148	SAFETY BRAKET B
032	617529	PIN
033	617485	TRIGGER VALVE UNIT
034	617501	TRIGGER UNIT CONTACT
035	576149	NOSE UNIT
036	576151	SCREW
037	576152	WORKPIECE CONTACT
038	576154	SPRING
039	576155	NOSE
040	576157	SCREW
041	576158	PUSHER UNIT
042	576159	MAGAZINE
043	576160	SCREW
044	576162	PUSHER LOCK
045	576164	BUTTON
046	576165	SPRING
047	576166	SPRING
048	576173	MAGAZINE COVER UNIT

049	617549	GASKET
050	576167	NUT
051	576168	END CAP
052	617534	WASHER
053	576169	SCREW
054	617509	AIR PLUG
055	576177	PIN
057	575850	SEQ.FIRE TRIGG. KIT
058	575849	MODEL LABEL SEQUENT.
059	575848	MODEL LABEL CONTACT
060	576175	SLIDING SHOE