

Fixed Soot Remover Powder Injector – EDP 572073

Equipment for blowing soot remover powder into the boiler fireside or into the gas side of the exhaust gas boilers. This is a simple, low cost and manually operated injector that ensures rapid and effective dosing of soot remover powder to prevent soot and firescale deposits.


FUELPPOWER SOOT REMOVER 25KG - 571240

Operation:


- 1) Fill dosing pot with Soot Remover powder
- 2) Open valves in sequence A, B and C
- 3) Open Vent Lock until soot remover powder is injected
- 4) Close valves in the sequence of C, B and A

Notes:

1. Place the outlet from the injector in the same direction as the gas flow
2. Avoid bends in the injection pipe. Injection Pipe/Fire Tube to be provided by the vessel/end user and not included in the supply.

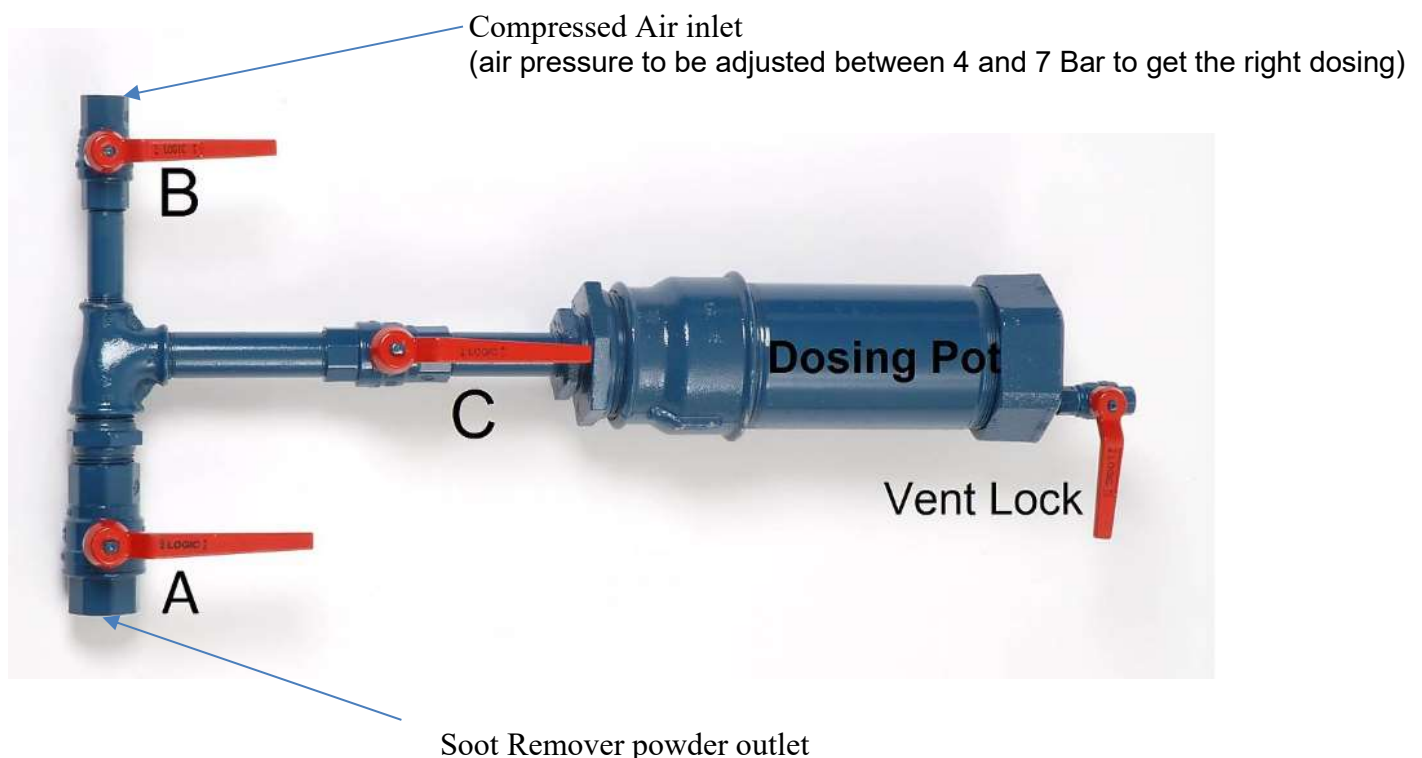

Installation Layout

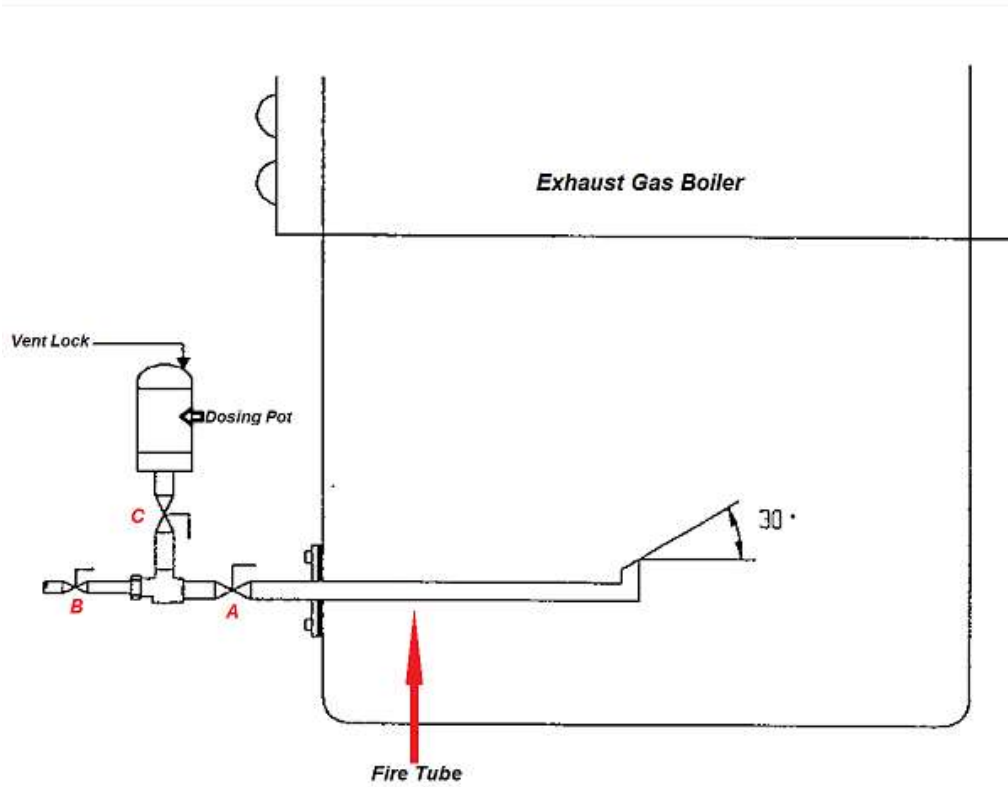

(Fire Tube/Injection Lance not included in the supply and end user/vessel to provide)