


## Portable Soot Remover Powder Injector – EDP 572065

Equipment for blowing soot remover powder into the boiler fireside or into the gas side of the exhaust gas boilers. This is a simple, low cost and manually operated injector that ensures rapid and effective dosing of soot remover powder to prevent soot and firescale deposits.

### FUELPPOWER SOOT REMOVER 25KG - 571240

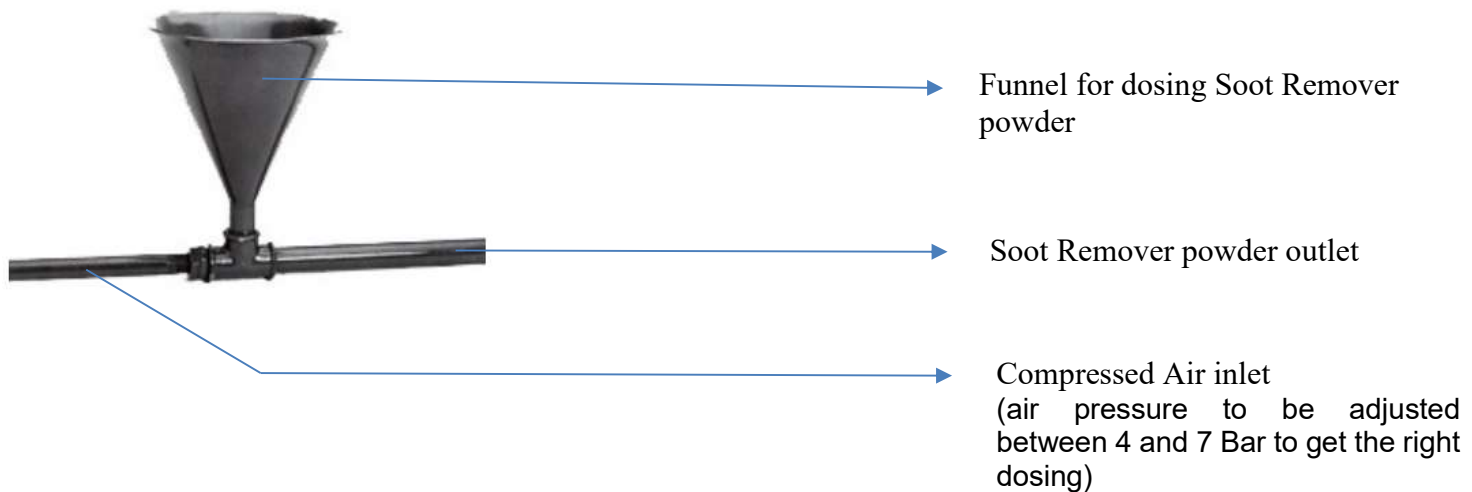

#### Operation:

1. The nozzle of the injector is inserted into a suitable part of the boiler and an air supply is attached to the compressed air connection.
2. The valve is opened allowing air to be blown into the boiler while Soot Remover powder is being fed simultaneously into the funnel and is carried with the compressed air into the combustion zone.