

Fitting Depth Adjusting Brackets MSB series mild steel enclosures

Prepared by Igsaan Jamie 24 July 24



Bracket Kit required

MSB enclosures

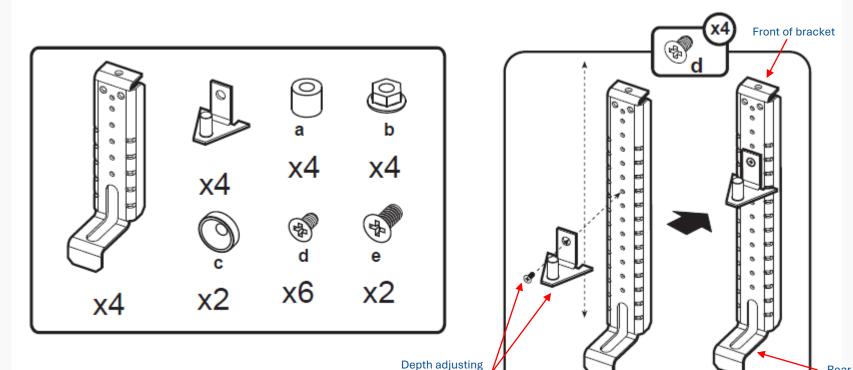


plate (screws d)



- For inner door fitting



DEPTH ADJUSTING BRACKETS (PACK 4)


Description	Part No.
For 150mm deep Enclosures	SP150
For 200mm deep Enclosures	SP200
For 250mm deep Enclosures	SP250
For 285mm deep Enclosures	SP285
For 300mm deep Enclosures	SP300
For 400mm deep Enclosures	SP400


Note, this kit and instructions applies to the MSB series mild steel enclosures only

Rear of bracket (L shape)



Fitting Instructions MSB enclosures

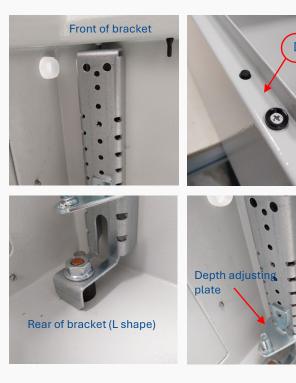



- Take care not to chip the paint when installing these brackets.
- Remove the respective sealing caps and insert the screws/pins supplied with the kit as shown in figures 3B and 4B.
- The images above shows the brackets installed.
- Install the mounting plate after the brackets have been installed.
- Insert and move the adjusting plates in the desired position and fit the inner door/escutcheon or back plate at the desired depth.

